


# GBV7000

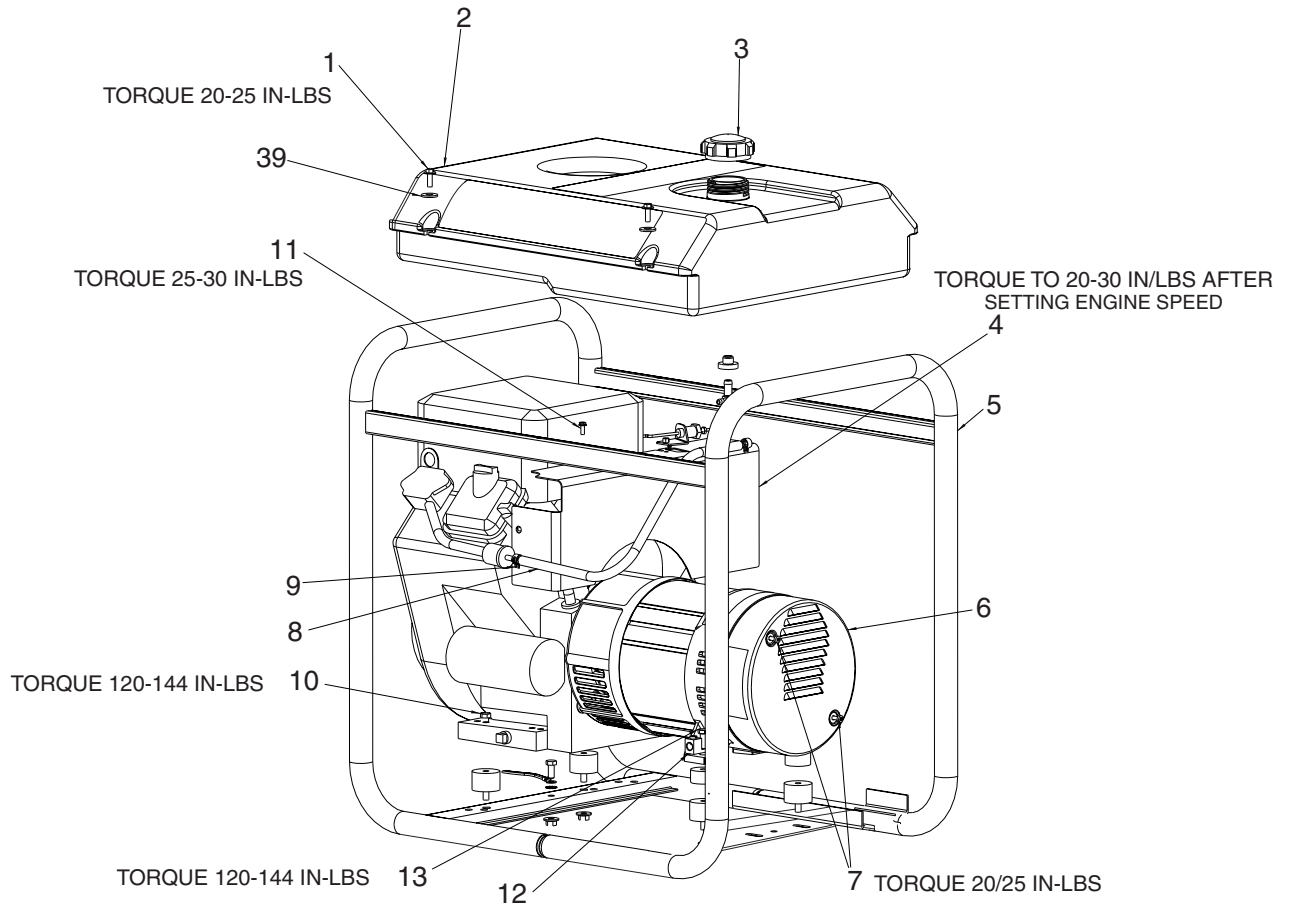


## **KEY NO.**

## **DESCRIPTION**

## **PART NUMBER**


1	FUEL TANK SCREWS	SSF-990
2	FUEL TANK	GS-0027
3	FUEL CAP	GS-0028
4	HEAT SHIELD	GS-0271
5	FRAME ASSEMBLY	GS-0053
6	END COVER	GS-0077
7	SCREW #10-24 x 1	SSF-573
8	FUEL HOSE	GS-0225
9	FUEL LINE CLAMP	GS-0227
10	SCREW 5/16-18 UNC x 1.75	95829230
11	SCREW #10-32 x 1/2	GS-0107
12	GROUND LUG	GS-0117
13	SCREW 5/16-18UNC	95829230

## GBV7000 (cont'd)

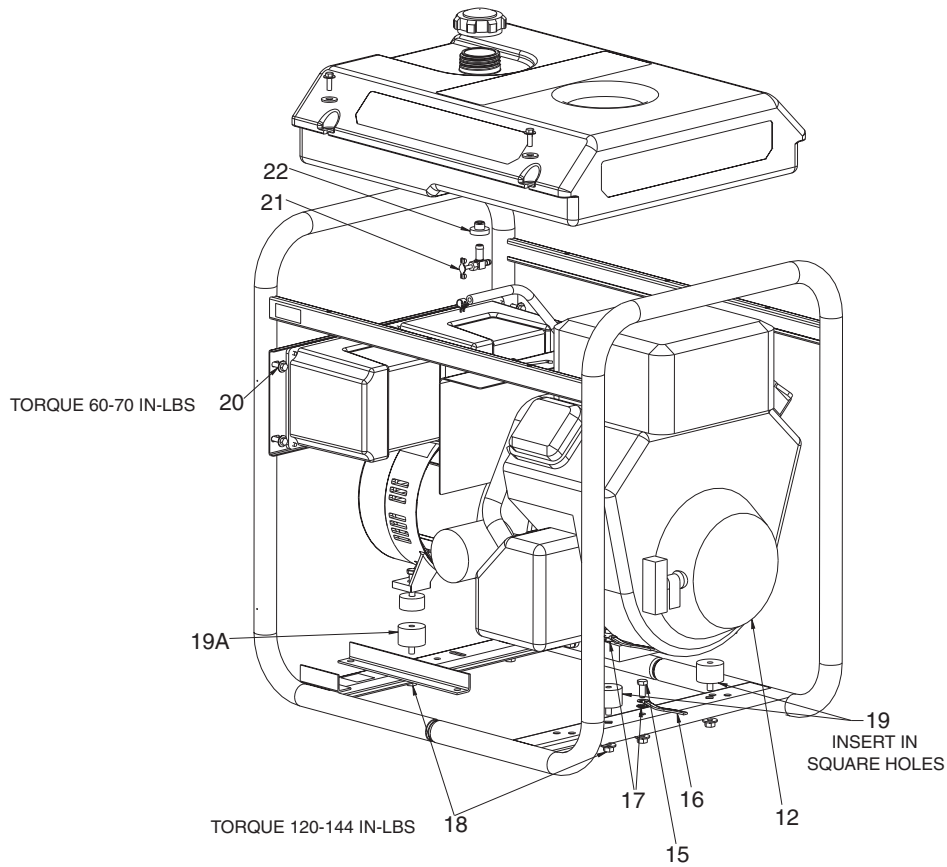

<b>KEY NO.</b>	<b>DESCRIPTION</b>	<b>PART NUMBER</b>
14	ENGINE (model# 294447-1042-E1)	-
15	SCREW 5/16-18 x 3/4	SS-12-CD
16	GROUND STRAP	GS-0118
17	LOCK WASHER	SSN-1619-ZN
18	LOCK NUT 5/16-18	SSF-8150
19	ISOLATOR	GS-0036
19A	ISOLATOR	GS-0033
20	SCREW 1/4-20 x 1/2	SSF-585
21	DRAINCOCK	GS-0437
22	DRAINCOCK GROMMET	GS-0446

## GBV7000 (cont'd)

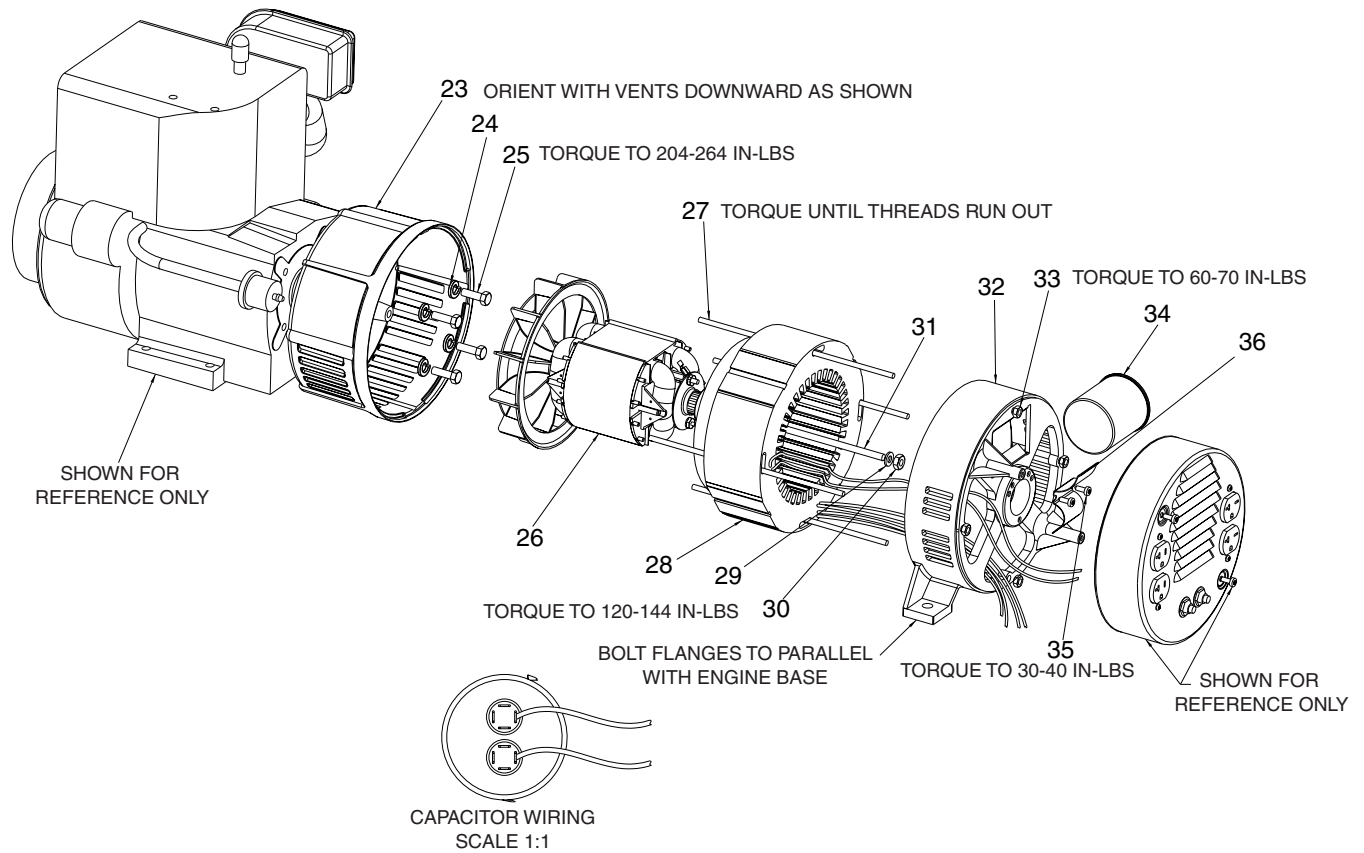

### KEY


<b>KEY NO.</b>	<b>DESCRIPTION</b>	<b>PART NUMBER</b>
23	DRIVE END ADAPTER	GS-0076
24	LOCK WASHER 3/8	SSN-619
25	CAP SCREW 3/8-16 x 1	SSF-577
26	ROTOR ASSEMBLY	GS-0571
27	STATOR THRU BOLT	GS-0273
28	STATOR ASSEMBLY	GS-0572
29	WASHER 11/16OD x 11/32	SS-6506-CD
30	NUT 5/16-24	SSF-576
31	ROTOR THRU BOLT	GS-0274
32	BEARING SUPPORT	GS-0861
33	HEX NUT 1/4-20	SSF-575
34	CAPACITOR	GS-0573
35	SCREW 10-32 X 1/2	GS-0107

### **ITEM NOT SHOWN**

*DIODES	GS-0082
	GS-0081
CABLE TIE	GS-0105
BEARING COVER	GS-0106
O-RING (included in GS-0681)	GS-0862

\*Refer to Page 4 in the Generator Repair Section for further **diode** information.

## GBV7000 (cont'd)

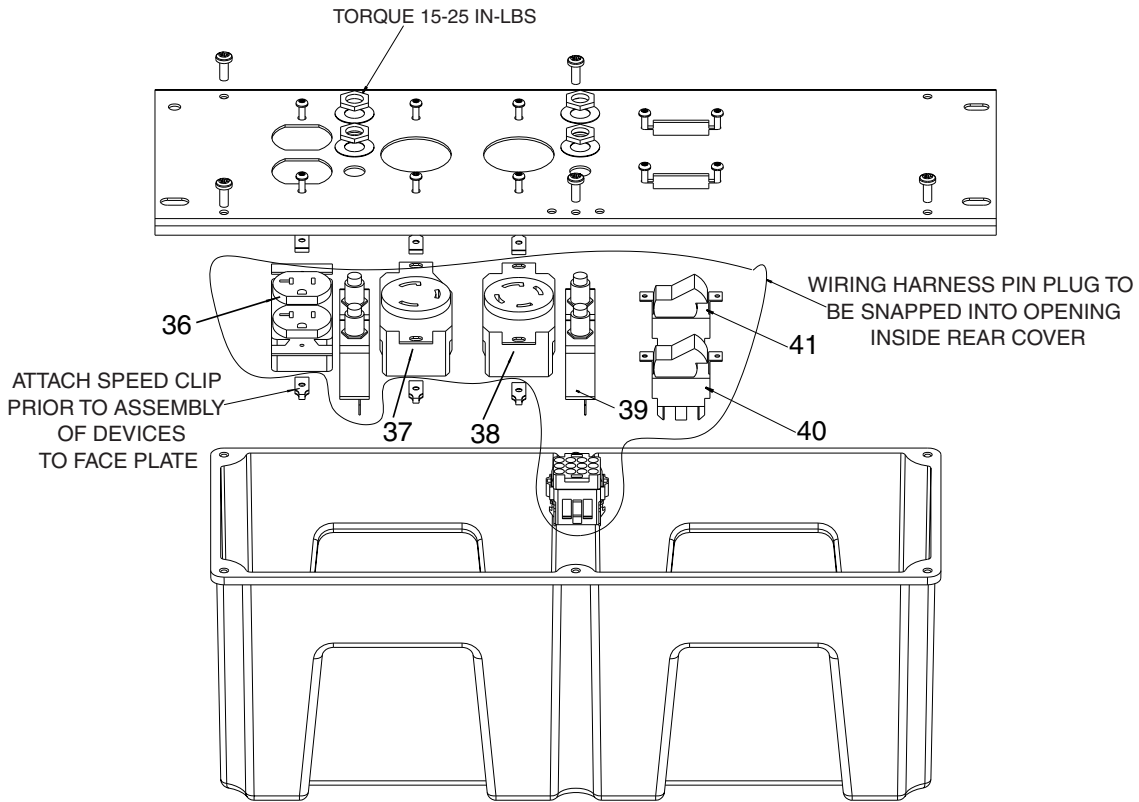

### KEY

<u>NO.</u>	<u>DESCRIPTION</u>	<u>PART NUMBER</u>
36	120V DUPL. RECEPTACLE	GS-0019
37	3 PRONG TWISTLOCK	GS-0021
38	3 PRONG TWISTLOCK	GS-0023
39	CIRCUIT BREAKER	GS-0026
40	FULL POWER SWITCH	GS-0045
41	ON/OFF(ON/OFF/START)	GS-0046

### Not Shown

MG-GENMAN-F	Operator Manual
GEN-7000	Parts Manual
GS-0450	Engine Manual